COOKTOP PARTS

For Model: WHP83812
(White)

30" ELECTRIC RANGE
CERAN COOKTOP
SELF CLEAN

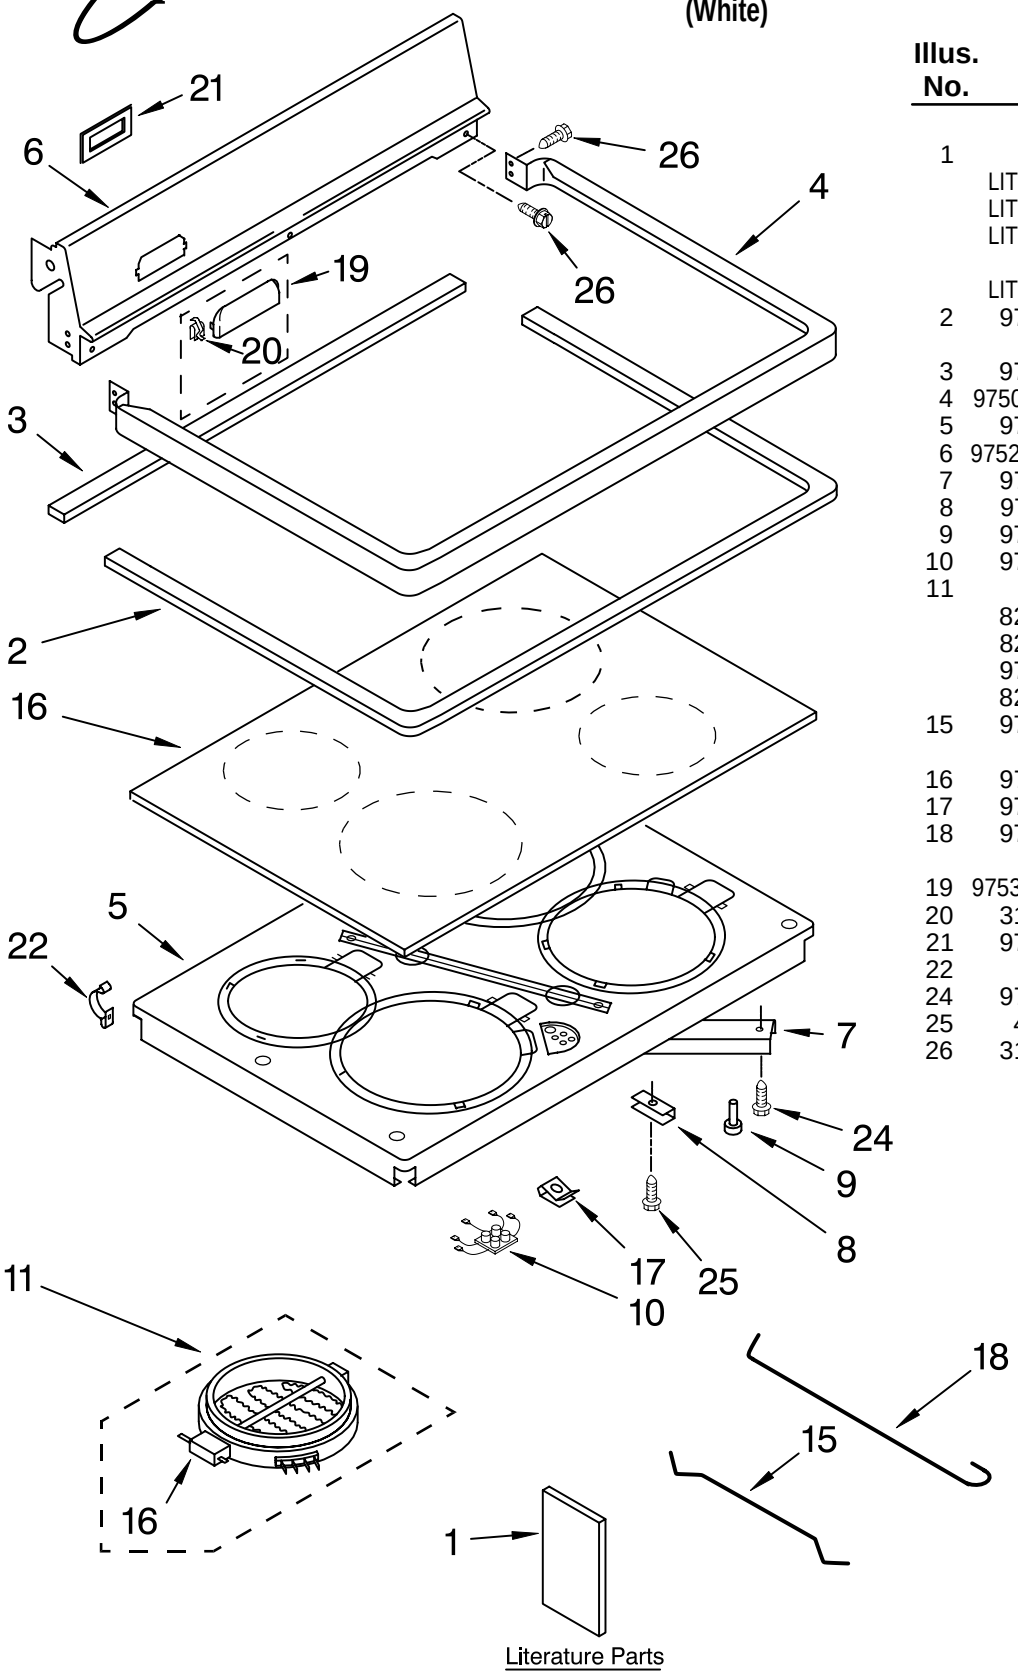

Literature Parts

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	LIT9754176	Use & Care Guide
	LIT9752766	Wiring Diagram
	LIT9752777	Installation Instructions
	LIT9752776	Template, Anti−Tip
2	9780939	Gasket, Cooktop Front & Sides
3	9781614	Rear Gasket
4	9750456PW	Frame, Cooktop
5	9781549	Support, Element
6	9752337GW	Back Splash
7	9781553	Brace, Support
8	9750821	Support Clips (4)
9	9750969	Bumper−White (4)
10	9781937	Hot Light
11		Element, Surface
	8272564	1500W − LR
	8272565	2500W − LF
	9753997	2200W − RR
	8272566	1800W − RF
15	9781460	Rod, Small Ceran Element
16	9781583	Cooktop, Ceran
17	9781235	Speed Nut
18	9781459	Rod, Large Ceran Element
19	9753040CW	Cap, Vent
20	3149190	Clip, Vent Cap
21	9750767	Gasket, Vent
22	98997	Clip, Wire
24	9780272	Screw, 10−16 x 1/2
25	423248	Screw, 10−16 x 3/4
26	3149333	Screw, 10−16 x 1/2

CONTROL PANEL PARTS

For Model: WHP83812
(White)

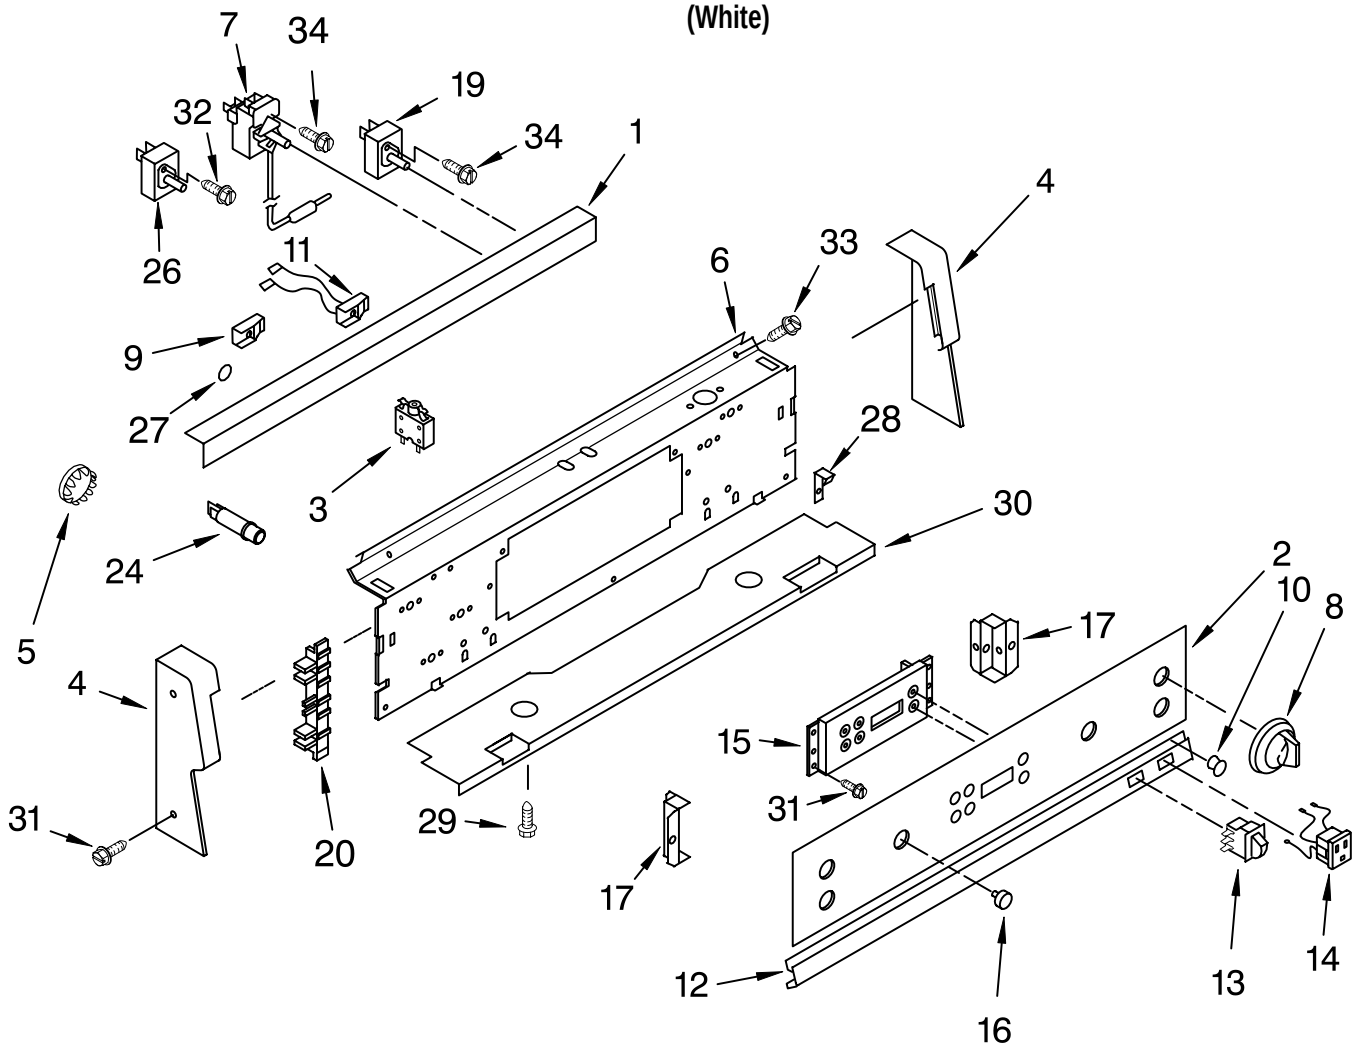

Illus. No.	Part No.	DESCRIPTION
1	9752431PW	Lamp Cover
2	9781917	Console−Glass (Control Panel)
3	3191072	Breaker, 15 Amp
4		End Cap
	9752422FW	Left
	9752423FW	Right
5	9780577	Button, Plug (2)
6	9781695	Panel, Control
	9752854	Spacer
7	9781314	Thermostat
8	9752405FW	Knobs, Control (6)

Illus. No.	Part No.	DESCRIPTION
9	313102	Light, Indicator (2) (Burners)
10	9780799	Lens − Red
11	9780798	Light Module (2)
12	9752442PW	Trim Strip
13	3191100FW	Switch, Oven Light
14	9751480FW	Outlet, Untimed
15	9781717	Timer
16	9781954FW	Knob, Timer (6)
17	9753304	Bracket (2)
19		Infinite Switch
	9750643	1400W
	9750644	1700W
	9750646	2400W (2)

Illus. No.	Part No.	DESCRIPTION
20	9753076FW	Insert (2)
24	9780797	Light, Pilot
26	9781312	Switch, Selector
27	9752589	Lens, Indic. (2)
28	9753017	Clip, Spring (2)
29	3196168	Screw, 8−18 x 1/2
30	9752439	Base, Console
31	9780265	Screw, 8−16 x 3/8
32	9780274	Screw, 8−18 x 3/8
33	9780852	Screw, 8−18 x 3/8
34	3400816	Screw, 8−32 x 7/32

DOOR AND DRAWER PARTS

For Model: WHP83812

(White)

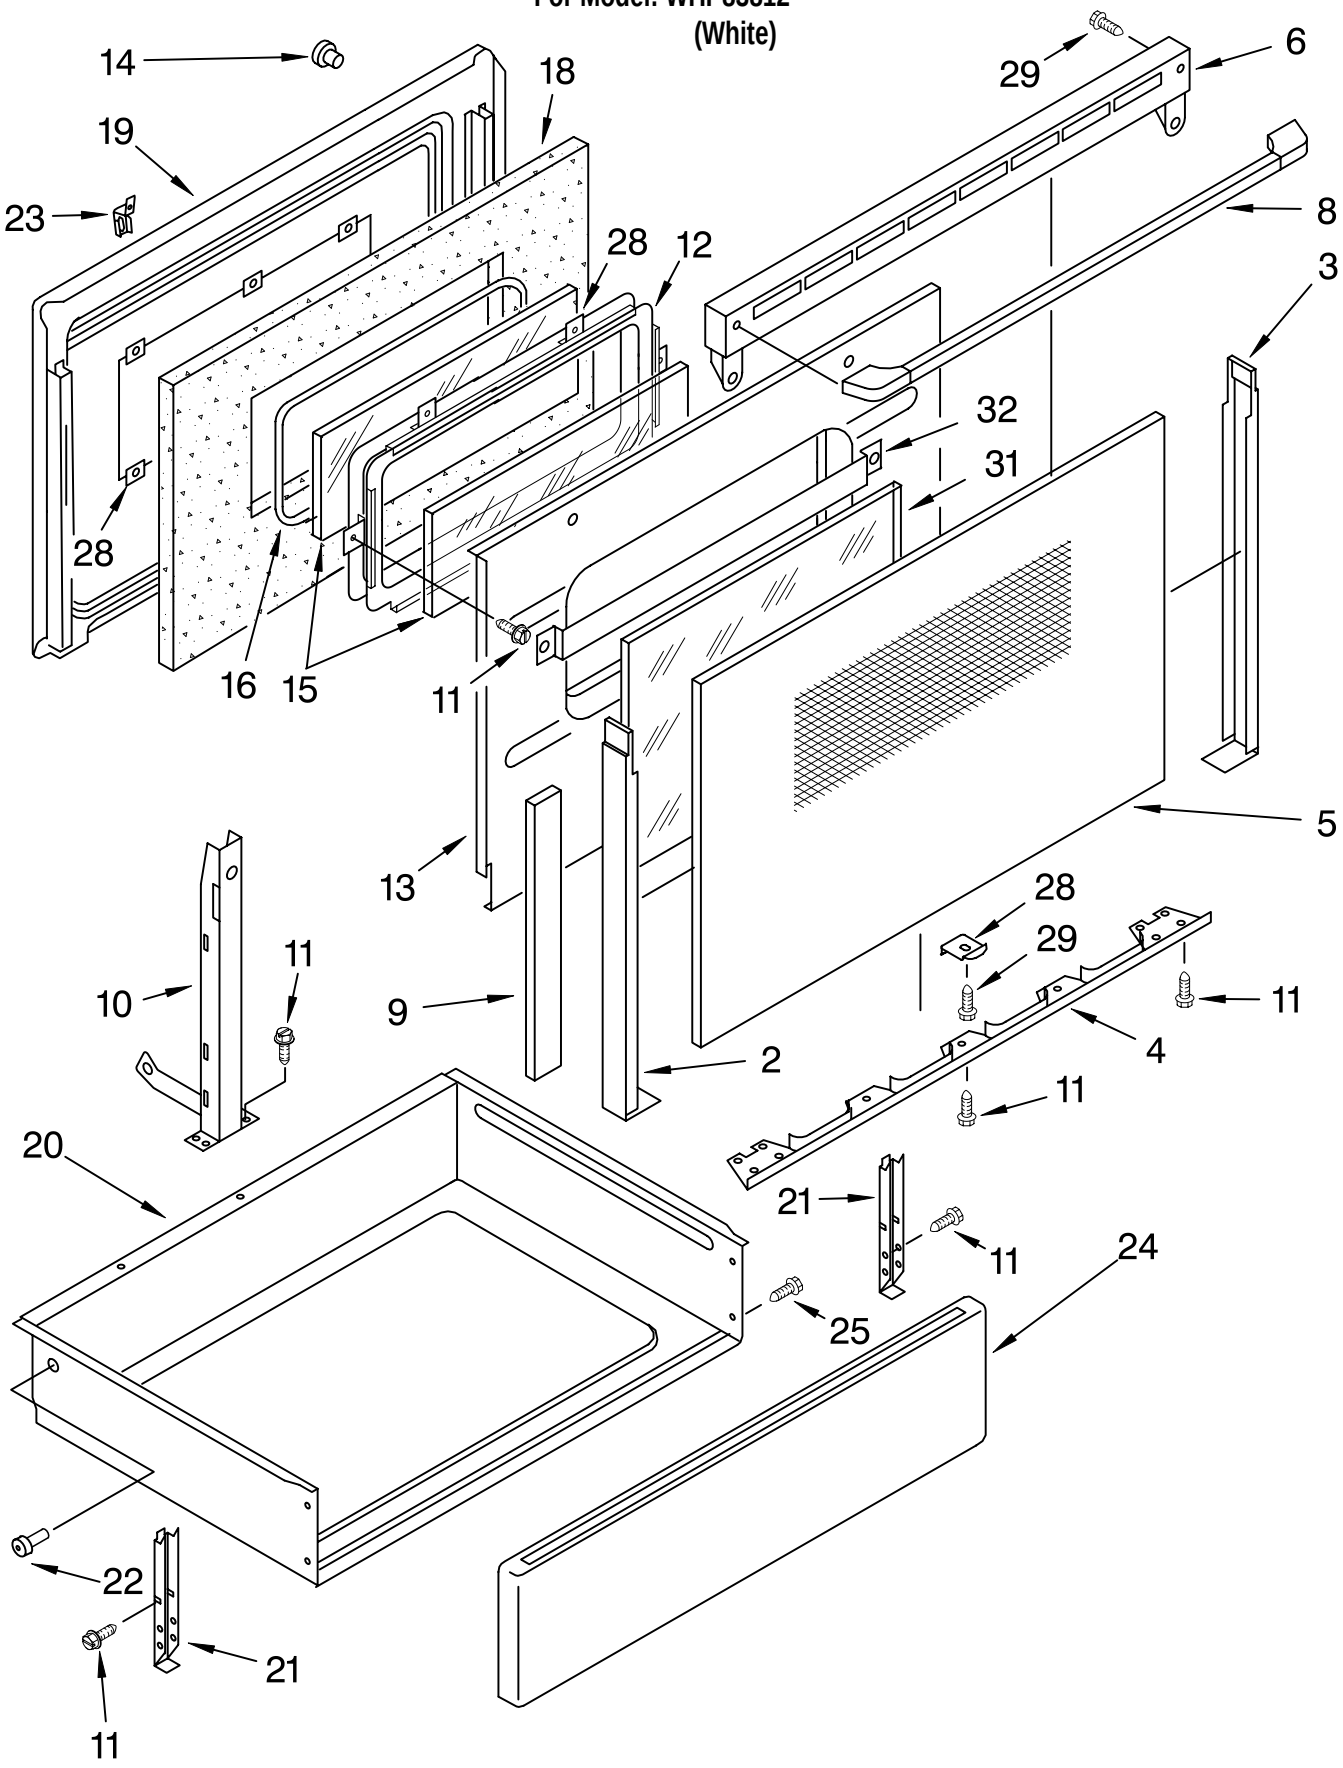

DOOR AND DRAWER PARTS

For Model: WHP83812

(White)

Illus. No.	Part No.	DESCRIPTION
2	9750631PW	Trim, Door−Left
3	9750632PW	Trim, Door−Right
4	9781209PW	Trim, Door Bottom
5	9781635PW	Glass, Door Front
6	9753498GW	Vent, Door
	9781659	Gasket, Door Vent
	9781490	Seal, Vent Side
8	9751136PW	Handle, Door
9	9781449	Gasket, Door Glass (4)
10	9782033	Hinge, Door R or L
11	9780265	Screw, 10−16 x 3/8
12	9781602	Frame, Window
13	9781586	Shield, Door
14	9780771	Bumper, Door
15	9781593	Glass, Coated
16	9755177	Seal, Window
18	9754006	Insulation, Door
19	9781600GM	Liner, Door
20	9780583	Drawer & Roller
21	9750169	Bracket, Drawer
22	422604	Roller, Drawer
23	9750676	Retainer, Door
24	9782108PW	Front, Drawer
25	9780272	Screw, 10−16 x 1/2
	90296	Clip
28	9781502	Spacer, Door (8)
29	9781072	Screw, 10−24 x 3/8
31	9781592	Baffle, Glass
32	9750693	Channel, Heat

OVEN CHASSIS PARTS

For Model: WHP83812

(White)

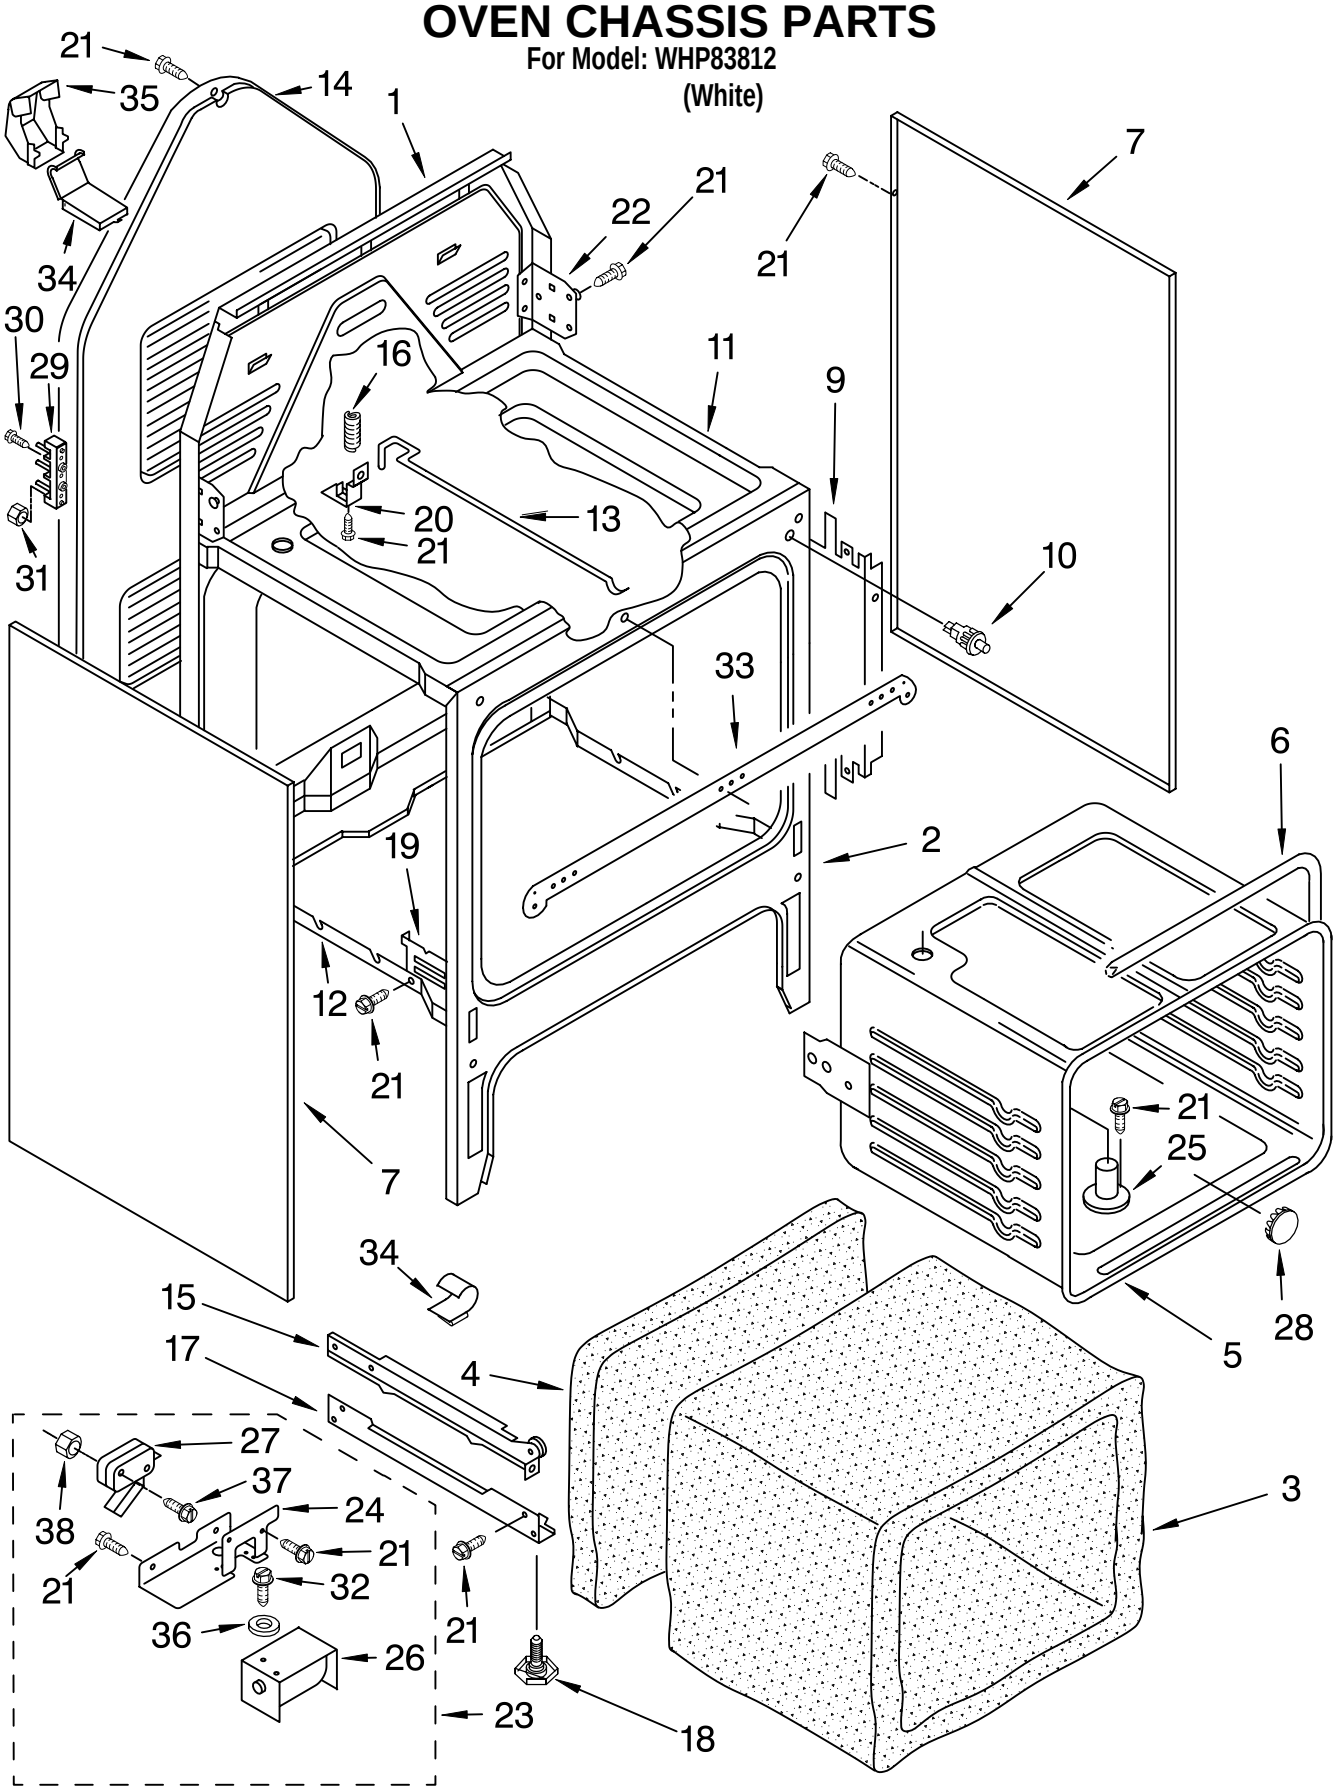

OVEN CHASSIS PARTS

For Model: WHP83812

(White)

Illus. No.	Part No.	DESCRIPTION
1	9750146	Main Chassis, Back
2	9750514GM	Chassis, Front
3	9754000	Insulation, Wrap
4	9754011	Insulation, Rear
5	9781293GM	Oven Liner
6	9755179	Gasket Oven
7	9781907PW	Oven, Side Panel
9	9780664	Shield, Insulation
10	9781580	Door Switch (Oven Light)
11	9750478	Burner Box
12	9750142	Oven Bottom
13	9750523	Rod, Lock
14	9750150	Panel, Rear
15	9750223	Drawer Rail, Left
	9750224	Drawer Rail, Right
16	9750833	Spring, Door Lock
17	9750147	Bottom Rail (2)
18	312701	Foot, (4)
19	9782005	Receiver, Hinge (R or L)
20	9750834	Bracket, Spring
21	9780265	Screw, 10−16 x 3/8
22	9750258	Hinge, Cktp.−Left
	9750416	Hinge, Cktp.−Right
23	9750522	Oven Lock Assembly
24	9750526	Bracket, Lock
25	9753091	Vent Tube
26	9750524	Solenoid (2)
27	9750965	Switch, Interlock
28	9780578	Plug, Button
29	258076	Block, Terminal
30	98884	Screw, 10−16 x 1
31	112432	Nut, #10−32 Hex
32	422222	Screw,10−32 x 5/16
33	9780585	Wire Guard
34	9750393	Cover, Vent
35	9750394	Vent Back
36	424238	Washer, #10
37	9750887	Screw, 4−40 x 1
38	9750888	Nut

OVEN PARTS

For Model: WHP83812

(White)

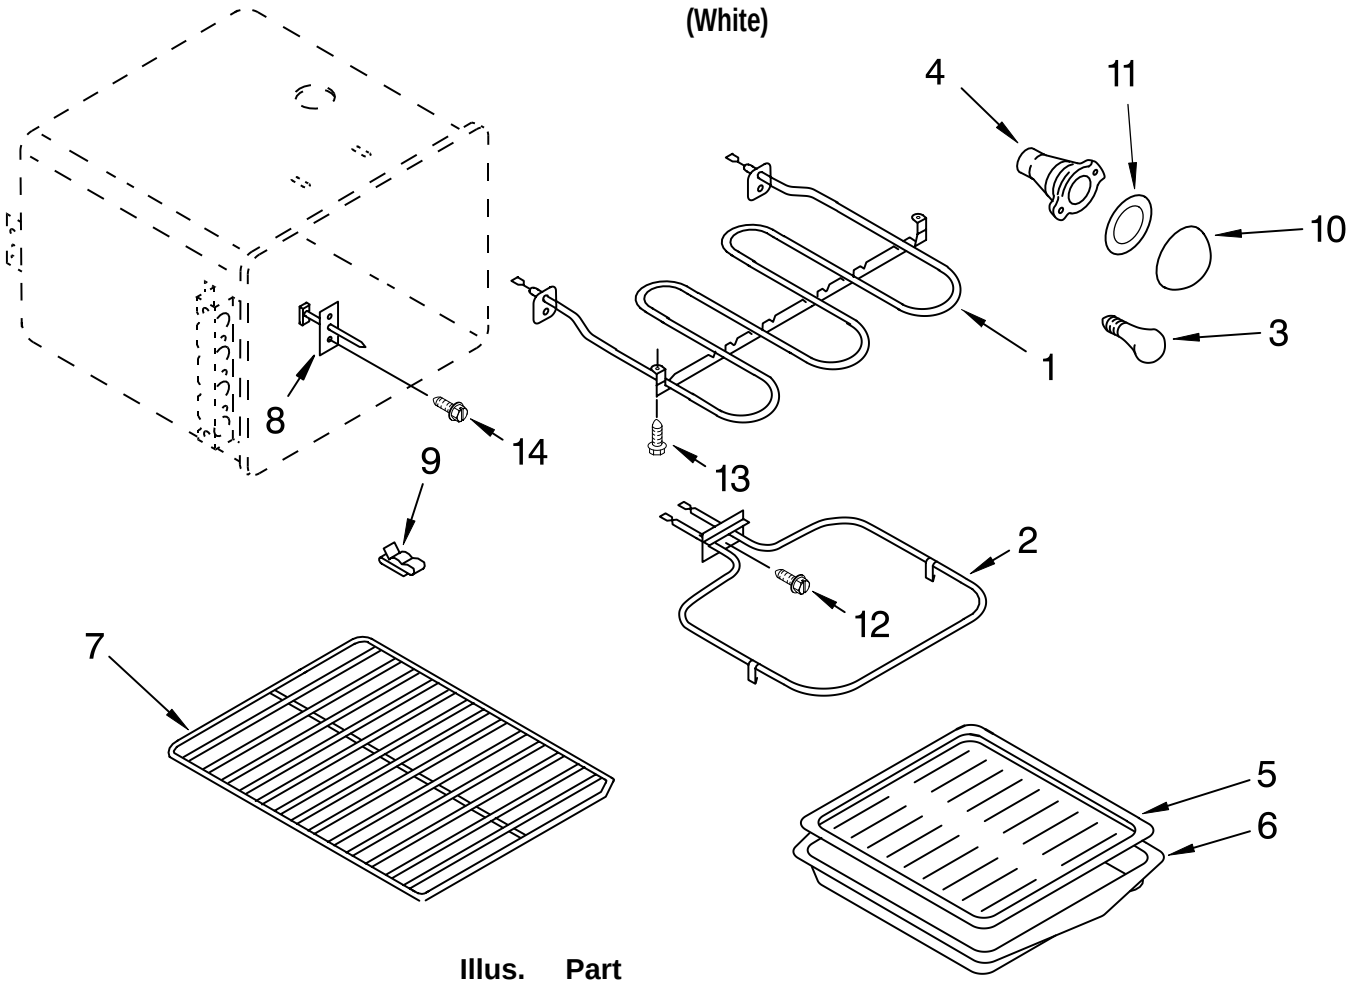

Illus. No.	Part No.	DESCRIPTION
1	9750211	Element, Broil
2	9750213	Element, Bake
3	8935	Bulb, Oven
4	9781050	Light Socket
5	420104GM	Grill, Broiler
6	420101GM	Pan, Broiler
7	9750498	Rack, Standard (2)
8	9781311	Safety Therm.
9	313382	Clip, Thermo
10	9781049	Lens, Light
11	3184533	Gasket, Lens
12	9781509	Screw, 8−32 x 3/8
13	340184	Screw, 10−16 x 1.5
14	9780265	Screw, 10−16 x 3/8

MISCELLANEOUS PARTS

For Model: WHP83812

(White)

Illus. No.	Part No.	DESCRIPTION

SPLICING WIRES−−25FT. LENGTH

	242828	Wire, Black 12 Ga. 150°c
	242820	Wire, Black 14 Ga. 150°c
	242821	Wire, Blue 14 Ga. 150°c
	242822	Wire, Brown 14 Ga. 150°c
	242830	Wire, Brown 14 Ga. 200°c
	242823	Wire, Green 14 Ga. 150°c
	242824	Wire, Orange 14 Ga. 150°c
	242829	Wire, Red 12 Ga. 150°c
	242825	Wire, Red 14 Ga. 150°c
	242831	Wire, Red 14 Ga. 200°c
	242826	Wire, White 14 Ga. 150°c
	242827	Wire, Yellow 14 Ga. 150°c
	242832	Wire, Yellow 14 Ga. 200°c

PAINT, TOUCH−UP (1/2oz.)

	72017	White
	72107	Almond
	72109	New Avocado
	72108	Coffee
	72110	Harvest Gold
**	511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

	350930	White
	350956	Almond
	261888	New Avocado
	261886	Coffee
	261890	Harvest Gold
	285006	Superior Black
	206922	Primer (White)

PAINT, BULK (1 qt.)

	799344	White (Uncut)
	978883	Almond (Uncut)
	261891	Harvest Gold (Uncut)

REFINISHING MATERIAL

	799832	Kit, Porcelain Repair (White)
	242756	Touch−Up Self−Clean (1/2 Pt.)
	261582	Grease
	814009	Glass Cleaner

INSULATION

	261514	Insulation, Fiberglass (1−1/2" x 24" x 120")
	240132	Insulation, Fiberglass (2−1/2" x 22" x 120")
	241430	Foil, Aluminum Oven (18" x 25')

WIRING HARNESS PARTS

	9781445	Harness, Wire (Selector To Oven)
	9753253	Harness, Wire (Timer)
	9781933	Harness, Wire (Cooktop)
	9752771	Harness, Wire (Cooktop Controls)
	9753254	Harness, Wire (Therm to Select)
	9750744	Harness, Wire (Door Switch)
	9781287	Power Cord
	690989	Screw, Grounding
	424238	Lock Washer #10
	9750984	Hanger, Wire
	9781291	Harness, Outlet
	20082084	Tie, Wire

ANTI−TIP KIT

	9752848	Anit−Tip Kit